




Krympslang!

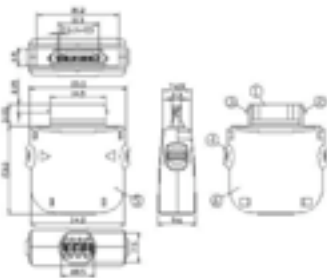

iPaq 38xx/39xx


Pin out 22 Pin Connector

- 1 V_AD P
 - 2 V_AD P
 - 3 V_AD P
 - 4 V_AD P
 - 5 Reserved – Do Not Use
 - 6 RS232 DCD
 - 7 **RS232 RXD**
 - 8 **RS232 TXD**
 - 9 RS232 DTR
 - 10 **GND**
 - 11 RS232 DSR
 - 12 RS232 RTS
 - 13 RS232 CTS
 - 14 RS232 RING
 - 15 GND
 - 16 No Connect – Do Not Use
 - 17 USB Detect
 - 18 No Connect – Do Not Use
 - 19 USB – UDC +
 - 20 No Connect – Do Not Use
 - 21 USB – UDC -
 - 22 GND
- Shell tied to GND

Kopplingsexempel:

Endast data (RS232) från exempelvis GPS. Anslut endast stift 7,8,10 enligt skiss nedan.

Spänningsmatning av iPAQ. Anslut en reglerad +5V/2A till pinnarna 1,2,3,4 och jord (minus) till pinnarna 10,15,22. Använd alla angivna pinnar eftersom iPAQ drar mycket ström. För att undvika kortslutning måste lödstället skyddas med krympslang eller motsvarande.

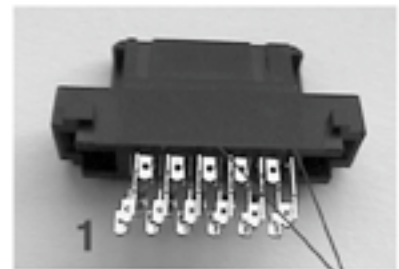

Clover Technology HB
www.clover.se

